PCI eSATA/SATA + ATA133 Combo Card User Manual

Features

Serial ATA

- 2 x Internal SATA 1.5 Gb/s port
- 1 x Shared eSATA 1.5 Gb/s port (eSATA version)
- Serial ATA 1.5 Gb/s per port
- Support Serial ATA rev. 1.0a
- Support HDD size bigger than 137 GB
- Support RAID 0, 1, 0+1, and JBOD modes

ATA133

- 1 x ATA133 Channel (max. 2 HDD)
- Support ATA/ATAPI-6
- Support HDD size bigger than 137 GB

Select eSATA Port (eSATA version)

1. To use eSATA, JP1,JP2,JP3,JP4 must set to 1-2.

Drivers installation (Windows XP)

1. Install the PCI card in the computer.
2. Insert the driver CD in CD ROM drive, e.g. G: drive.
3. Search the directory of “VIA SATA” and run Setup.exe.

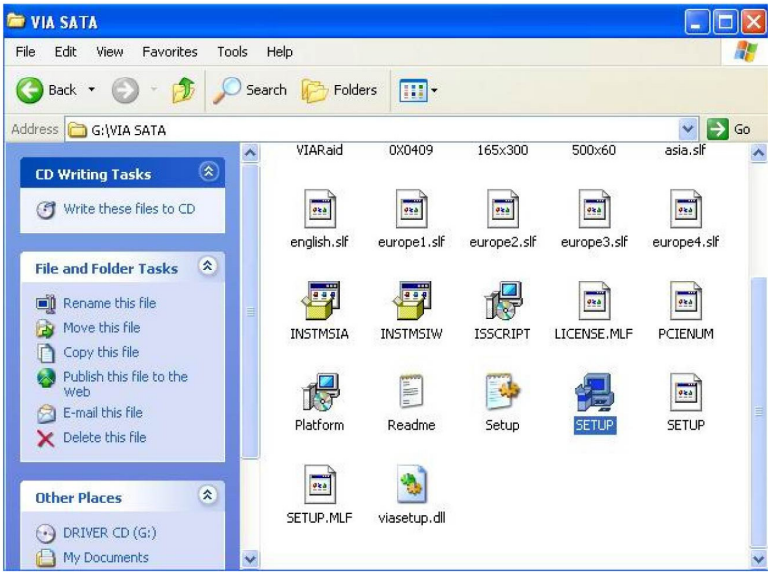

4. Follow the installation screens.

VIA RAID Setup Wizard
Hyperion Pro
Welcome to the Install Wizard for VIA VT64xx Series RAID Driver, Utility Program
The Install Wizard will install VIA VT64xx Series RAID Driver, Utility Program on your computer. To continue, click Next.
U-Version:5.2.1.2
< Back
Next >
Cancel

5. Follow the installation screens.
6. After installation complete, Windows will reboot the computer.

VIA RAID Setup Wizard
Hyperion Pro
Install Wizard Completed.
The Install Wizard has successfully installed VIA VT64xx Series RAID Driver, Utility Program. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

7. After computer reset, Device Manager will show “VIA VT6421 RAID Controller” in SCSI and RAID controllers category.

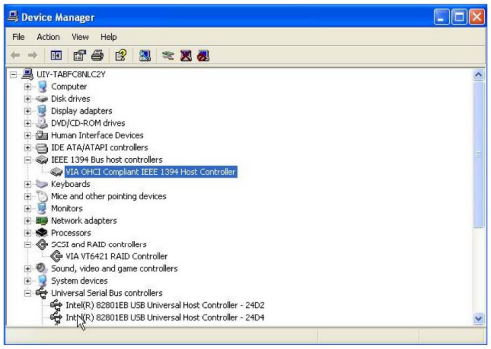

8. For other operating system installations, please follow the similiar steps.

9. For setup the RAID modes, run the V-RAID Tools installed.